
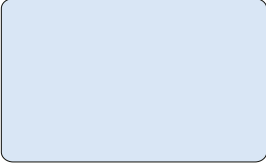

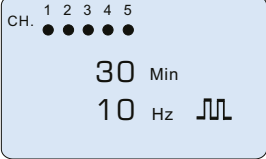

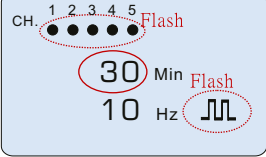
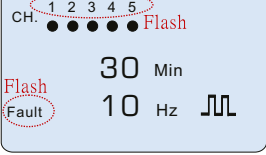
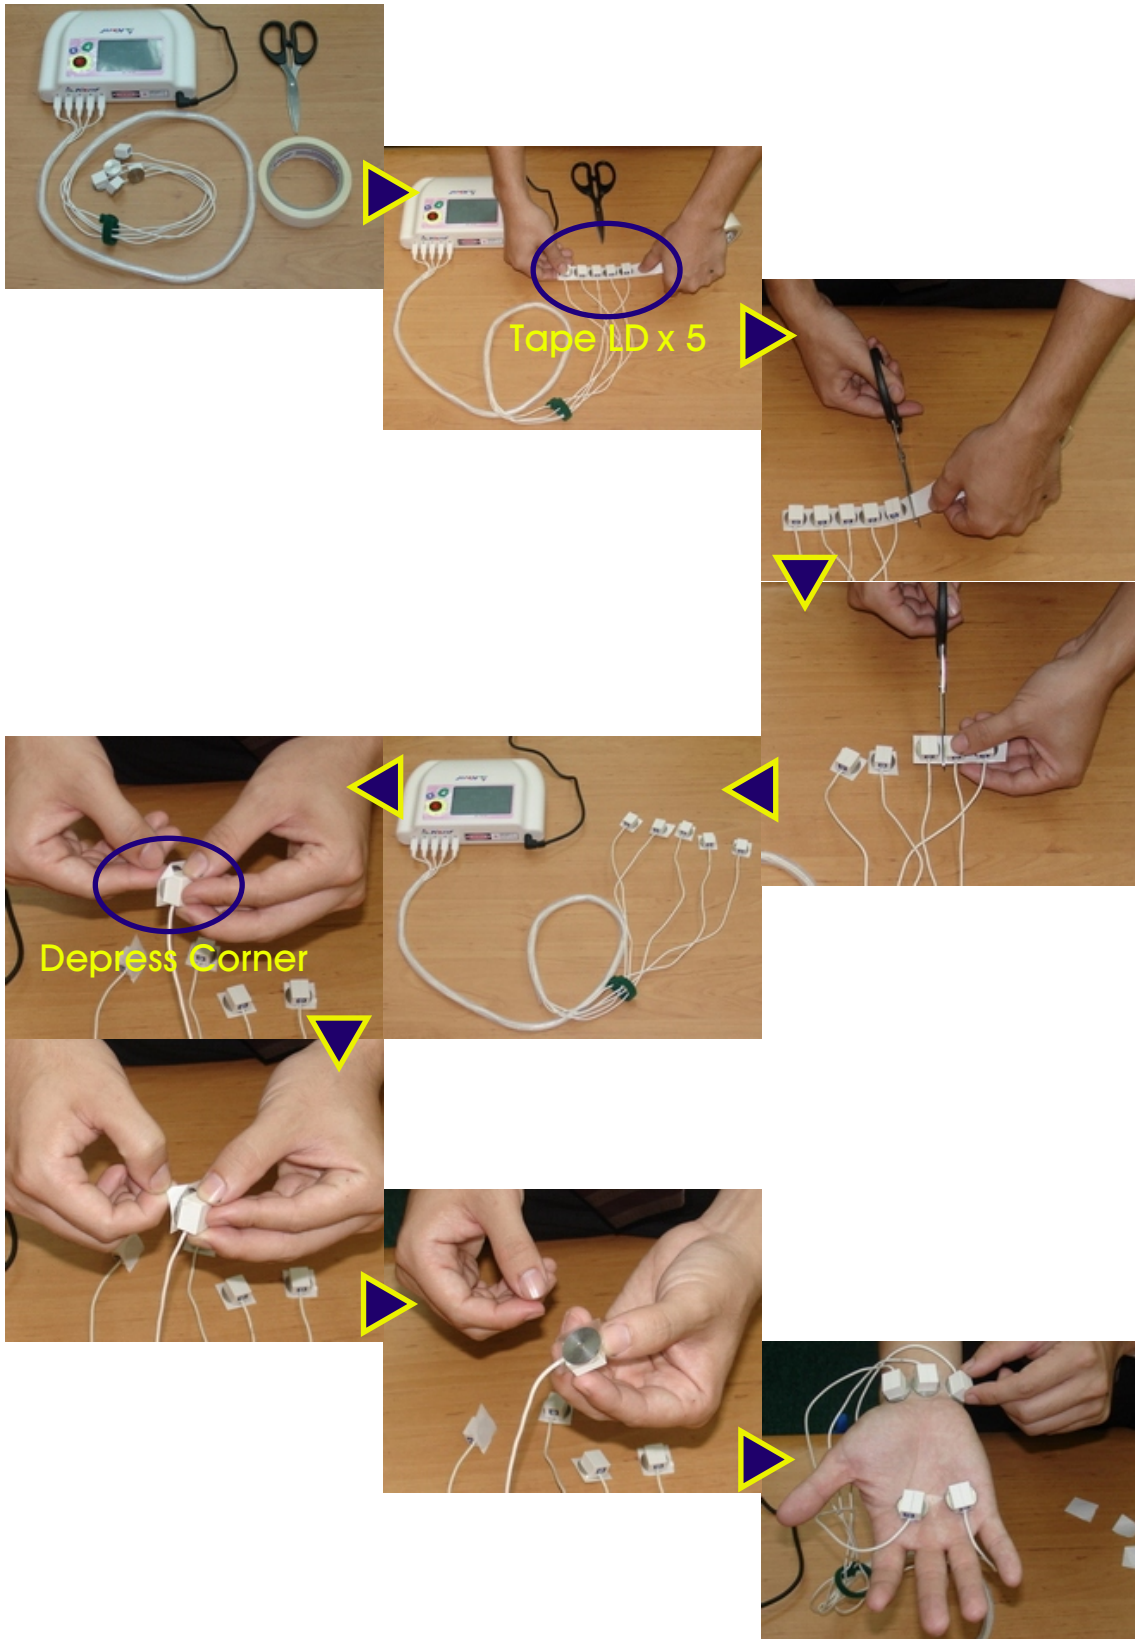


Operation

Operation			LCD Display
STEP	ACTION	PUSH	
1	Power ON		
2	Program Setting		
3	Start		
Fault Alarm:(1) Fault Sign Flash (2) Faulty Channel(s) Flash Check Connection Wire of Flashing Channel(s)			

Laser Module Tapping



Konftec Corporation

Taiwan: 13F-7, No. 77, Sec. 1, Sintai 5th Rd.
Sijhih City, Taipei County 221
Taiwan

U.S.A.: 20018 N. 2nd Ave.
Phoenix AZ85027
U.S.A.